



# why EVO 5.0

NEW RELEASE

NEW UNIVERSAL  
**REMOTE CONTROL**

.....  
[www.radiocomandowhy.com](http://www.radiocomandowhy.com)

Multifrequency  
**All-in-one**

Up to **4** different remotes in **1**



**tecnology - fixedcode - rollingcode**

## FIXED CODE DUPLICATING PROCEDURES



1. While pressing the button 1 of the "WHY EVO", press 4 times the button 2.
2. Release both buttons. Now the led of the WHY emits a quick flash every 2 sec.
3. Place the original remote control in front of the "WHY EVO", at about 2-3 cm of distance (as shown in the picture below).
4. Press and retain pressed the button of the original remote control that you want to copy until the WHY's led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the "WHY EVO" where you want to store the code just copied, until the led will turn off.
6. The copy has been happened with success, verify on the automation the orderly functioning of the new WHY EVO remote control.

### Note:

- If the LED will flash only 3 times and than will turn off, it means that the code hasn't been copied well. In this case repeat the operation from the point 1.
- The memory of the "WHY EVO" is completely re-writable.
- To duplicate a second button, repeat the operation from the point 1.

BLACK  
BLACK  
4790834



BLACK  
GREEN  
4790835



BLACK  
RED  
4790836



**new**

WHITE  
4790830




RED  
4790832



GREEN  
4790833



### Best position for duplication

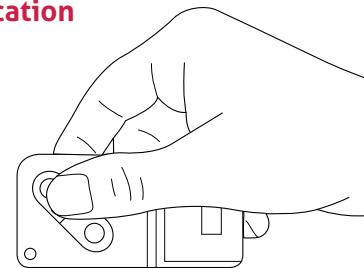


2-3 cm




## ROLLING SIMPLE

### DUPLICATING PROCEDURES

1. While pressing the button 1 of the "WHY EVO", press 4 times the button 2.
2. Release both buttons. Now the led of the WHY emits a quick flash every 2 sec.
3. Place the original remote control in front of the "WHY EVO", at about 2-3 cm of distance (as shown in the picture below).
4. Press and retain pressed the button of the original remote control that you want to copy until the WHY's led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the "WHY EVO" where you want to store the. code just copied, until the led will turn off.
6. The copy has been happened with success.
7. Proceed with the remote control recognition on the receiver by the  procedure (verify the models list - see 5-6-7 pages) or follow the producer's methods.

#### Note:

- If the LED will flash only 3 times and than will turn off, it means that the code hasn't been copied well. In this case repeat the operation from the point 1.
- The memory of the "WHY EVO" is completely re-writable.
- To duplicate a second button, repeat the operation from the point 1.

To activate the remote control on the receiver for models marked with , proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the others models: Refer to the instructions of the original model.

NOTE: The seed code of the WHY EVO can be emitted as below:

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.


ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".

## ROLLING COMPLEX

### DUPLICATING PROCEDURES

**BFT** 



1. While pressing the button 1 of the "WHY EVO", press 4 times the button 2.
2. Release both buttons. Now the LED of the WHY emits a quick flash every 2 sec.
3. Place the original remote control in front of the "WHY EVO", at about 2-3 cm of distance.
4. Press and retain pressed the button of the original remote control that you want to copy until the WHY's led will turn on with a fix light and then emits a double flash every 2 sec.
5. Transmit now the seed code of the original remote control (by pressing the rear hide button or the buttons 1 and 2 simultaneously in the new models)
6. Now the LED will flash quickly, press the button of the "WHY EVO" where you want to store the code just copied, until the LED will turn off.
7. Now activate the  procedure to insert the new remote control on the receiver.

**FAAC SLH**  
433 - 868



**GENIUS JLC**  
433 - 868



ATTENTION, PLEASE: Verify that the remote control to be copied is a MASTER.

Pressing any button, the LED should issue a double flash rather than switch on immediately as a fixed light.

1. While pressing the button 1 of the "WHY EVO", press 4 times the button 2.
2. Release both buttons. Now the LED of the WHY emits a quick flash every 2 sec.
3. Place the original remote control to clone in front of the "WHY EVO" at a distance of 2-3 cm.
4. Press and retain pressed the original remote control button that you want to copy until the LED WHY switches on a fixed light and then It stars to emit a double flash every 2 seconds.
5. Predispose the FAAC/GENIUS remote control for the emission of the seed code (by pressing simultaneously the buttons 2 and 3)
6. While the FAAC/GENIUS LED is flashing, place it in front of the "WHY EVO", at about 2-3 cm of distance and press the button that you want to copy until the WHY's led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
7. While the LED is flashing, press the button of the "WHY EVO" where you want to store the code just copied, until the led will turn off.
8. The copy is successfully. Please verify on the automation the correct operation of new WHY EVO remote control.

To activate the remote control on the receiver for models marked with , proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the others models: Refer to the instructions of the original model.


NOTE: The seed code of the WHY EVO can be emitted as below:

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".

## ROLLING COMPLEX DUPLICATING PROCEDURES



1. While pressing the button 1 of the "WHY EVO", press 4 times the button 2.
2. Release both buttons. Now the LED of the WHY emits a quick flash every 2 sec.
3. Place the original remote control in front of the "WHY EVO", at about 2-3 cm of distance.
4. Press and retain pressed the button of the original remote control that you want to copy until the WHY's led will turn on with a fix light and then emits a double flash every 2 sec.
5. Press and retain pressed once again the same button of the original remote control.
6. Now the LED will flash quickly, press the button of the "WHY EVO" where you want to store the code just copied, until the LED will turn off.
7. Now activate the  procedure to insert the new remote control on the receiver.

To activate the remote control on the receiver for models marked with , proceed as below:

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

To activate on the receiver all the others models: Refer to the instructions of the original model.

NOTE: The seed code of the WHY EVO can be emitted as below:

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".

## COMPATIBILITIES LIST

### ADYX

BRAVO, TE4433H, TE4433H BLUE



### ALLMATIC

B.RO OVER, B.RO 2WN, TECH3, MINI-PASS, BRO.STAR



### APERTO

TX02-434-2, TX02-868-2 BLUE,  
4025 TX02-868-2, 4022 TX02-434-2, 4020 TX-03-868-4, 4013  
TX03-434-4

### APRIMATIC

TR2/TR4, TM4



### ATA

PTX4 BLUE/PTX 4 PINK

### BALLAN

FM404B, 4013

### BENINCÀ

TO.GO2 VW/TO.GO4 VW, TO.GO2  
QV, TO.GO4 QV, IO, T2 VW/TO.GO4  
VW, APPLE, LOT2WCV



### BFT

MITTO 2M/MITTO4M, MITTO 2A/  
MITTO 4A, MITTO RCB02/MITTO  
RCB04, GHIBLI, KLEIO,  
TRC2/ TRC4, RB4 MURALE



### CARDIN

S449  
TRQ449100/TRQ449200/  
TRQ449300/TRQ449400,  
TXQ449200/TXQ449300/  
TXQ449400, S486:TRQ486200/  
TRQ486400, TXQ486200/  
TXQ486400



### CHAMBERLAIN LIFTMASTER MOTORLIFT

94335E, 4333E, 4335E, 94334E,  
4333EML, 4335EML, 84334EML,  
4335EML

### DEA

TR2 MIO/TR4 MIO, GENIE R, TS2 MIO  
868/TS4 MIO 868

### DASPI

ZERO 2 RC/ZERO 4 RC



### DITEC

GOL4, BIXLP2, BIXLP2 RED, BIXLG4



### DOORHAN

TRANSMITTER 4

### ECOSTAR

RSE, RSC, RSZ

### FAAC

XT4 433 RC, TE4433H



### FAAC

XT2/XT4 433 SLH, XT2/XT4 868  
SLH, XT2/XT4 433 SLH LR, XT2/XT4  
868 SLH LR, T2/T4 433 SLH, T2/  
T4 868 SLH, TML2/TML4 433 SLH,  
TML2/TML4 868 SLH, DL2/DL4 868  
SLH.

### FADINI

JUBI SMALL, JUBI-2, JUBI-4



### GENIUS

BRAVO TE4433H, ECHO





## COMPATIBILITIES LIST

### GENIUS

JA332 AMIGO 2 868, JA334 AMIGO 4, AMIGOLD 2/AMIGOLD 4, KILO 2/KILO 4 433 JLC, KILO2/KILO4 868 JLC

### GIBIDI

AU1680 WOOD, GIBIDI AU1610, GIBIDI AU1680, AU1810, AU1600, AU01590 AU03000 DOMINO, DTC 4334



### KEY

900TXB - 42R, SUB44, TXB-44R, TXG-44R

### KING GATES

STYLO 4



### LABEL

SPYCO

### MERLIN/PROLIFT

M230T (PROLIFT), M430R (PROLIFT)

### MERLIN 2.0

E945M, E943M, E940M, E940M

### MERLIN

M842 (GREEN REMOTE), M832 (GREEN REMOTE), M844 (GREEN REMOTE), C945, C940, C943

### MHOUSE

TX4, TX3, GTX4



### MOOVO

MT4



### NICE

ONE:ON1/ON2/ON4/ON9,  
ONE ERA:ON1E/ON2E/ON4E/ON9E,  
INTI1, INTI2

### NICE

SMILO2/SMILO4, FLO1R-S, FLO2R-S, FLO4R-S, VERY VR, FLO1RE/  
FLO2RE/FLO4RE



### NOVOFERM

NOVOTRON 502-504-512MIX43-2, MTR40-2, MCHS43-2, MHS43 (2-4), MNHS433 (2-4)

### NOVOTECNICA

BIXL2



### O&O

TWIN, TX2/TX4 (NEO),  
T.COM R4-2/T.COM R4-4,  
T.COM R8-2/T.COM R8-4



### PRASTEL

MPSTF2RE, MPSTF4RE, MPSTL-1E,  
MPSTL-2E, MPSTL-4E, MPSTP2E,  
MPSTP2E BLUE, MT4E, MT2E, BFOR,  
TRQ4P, TC2E, TRQ2P



### PROEM

ER2C4ACS/ER4C4ACS

### PUJOL

VARIO, MARTE

## COMPATIBILITIES LIST

### RIB

LITHIO

### SEAV

BE-HAPPY-RS1, BE-HAPPY-RS2,  
BE-HAPPY RS3, BE-SMART RSX,  
BE-HAPPY RH1, BE-HAPPY RH2,  
BE-HAPPY RH3

### SICE

4790207



### SIMINOR

S433-4T/S433.4T SIMINOR  
433-NLT42/433-NLT4

### SOMFY

TELIS 1 RTS/TELIS 4 RTS



### SOMFY

KEYTIS 2 NS/KEYTIS 4 NS,KEYGO 4  
RTS,SOMFY 433-NLT4 BEIGE, SOMFY  
433-NLT2 RTR, SOMFY TX2 433MHZ

### SOMMER

4014 TX03-434-2, 4013 TX02-434-4,  
4022 TX03-434-2, 4026 TX03-868-2,  
4020 TX03-868-4, 4025-TX02-  
868.4011, 4010

### STAGNOLI

AV223

### TAU

250 SLIM RP, 250 T4 RP



### TELCOMA

FM 402, FM 402 E

### VDS

TRQ, ECO-R



### V2

PHOENIX 433-868, TXC, TSC, TRC,  
HANDY

